

# **BASELINE<sup>®</sup>** EVALUATION INSTRUMENTS


## **Hydraulic Wrist Dynamometer**

### **Instruction Manual**



## About the Baseline® Wrist Dynamometer

- Simply and accurately measures the strength of the wrist muscles during flexion, extension, abduction and adduction and the forearm muscles during supination and pronation.
- The Baseline® wrist/forearm dynamometer features the time proven hydraulic system used in the industry accepted
- Baseline® and Jamar® hand dynamometers.
- For hand held use, the dynamometer can accommodate the
- Baseline® single-grip and dual-grip handle.
- Maximum reading remains until the unit is reset.
- The strength reading can be viewed as pounds or kilograms.
- Comes with portable carrying case.
- Made in USA with a 1-year manufacturers warrantee.
- CE certified.

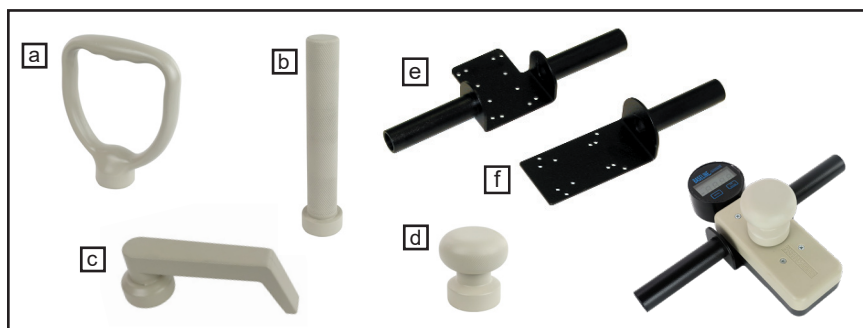

## Baseline® wrist/forearm dynamometer

- Includes door knob grip and case.

12-0250 analog (dial) readout

12-0251 digital (LCD) readout

## Measurement accessories

- Measurement accessories easily snap on and off.

12-0261 [d] door knob grip [supination / pronation]

12-0262 [a] shovel handle [supination / pronation]

12-0263 [c] lever handle [abduction / adduction]

12-0264 [b] rod/pipe grip [flexion / extension]

12-0385 [e] single grip handle

12-0389 [f] dual grip handle

12-0266 table-mount bracket

## USAGE

Snap appropriate grip into the wrist dynamometer body to secure unit for test. hold unit either by grasping the dynamometer body, or using a single or dual grip handle. Set max indicator to zero. Have patient twist grip with maximum force, note reading. Re-set to zero for next test.

## CALIBRATION


The Baseline® wrist dynamometer is a sealed unit and calibrated at the factory. However, if indicator needle is out of “zero-range” it may be reset. Remove clear cover by turning counter clockwise. Adjustment pin located by 220Kg marking. Turn pin to reset to zero. If unit is leaking hydraulic fluid it should be returned to factory for repair and recalibration.

## WARRANTY

The Baseline® Hydraulic Wrist Dynamometer is warranted for 1 (one) full year (parts and labor) from date of purchase. If unit needs repair contact your local dealer or Fabrication Enterprises, Inc.

---

## HOW TO INSTALL HANDLES

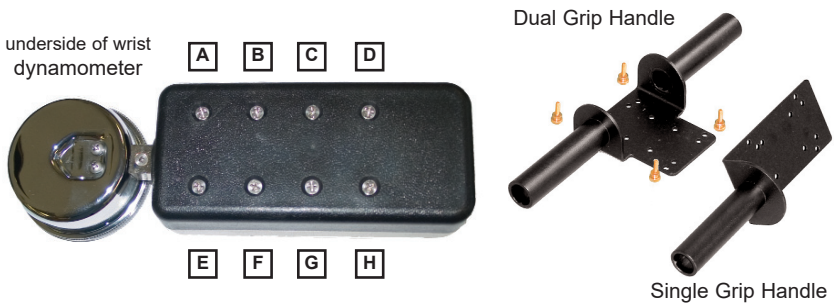


### Single Grip Handle:

1. Remove screws “D” and “J”
2. Position single grip handle and apply 2 thumb screws to connect the handle to the openings at “D” and “H”

### Dual Grip Handle:

1. Remove screws “A” “D” “E” and “H”
2. Position dual grip handle and apply 4 thumb screws to connect the handle to the openings at “A” “D” “E” and “H”

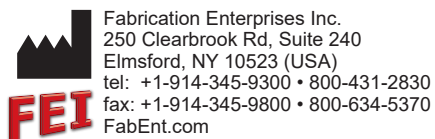

©2021 FEI, all rights reserved. Baseline is a registered trademark of Goldberg.

rev0921